

LAF Classic Air Valve Removal

Time Needed: 5min

Parts Needed: 8000000356 Air Valve 0,8mm



Tools Needed: cross screwdriver

Step1

- Remove the cross screw on the valve.
- Remove the hose from the lower part.



Step2

1. now you can detach the upper part from the lower one.
2. and if necessary, install the new one.

