


## LAF Classic Removal housing

Time Needed: 30 min

Tools Needed: Screwdriver Torx 20, Pliers

### Step1


- remove the plate on the back side the 2 screws that are located there can be unscrewed by hand.
- If the machine is already connected, remove the drainage hose and the water pipe.
- inside you will find a screw that you can also remove by hand it holds the unit and the fridge in place

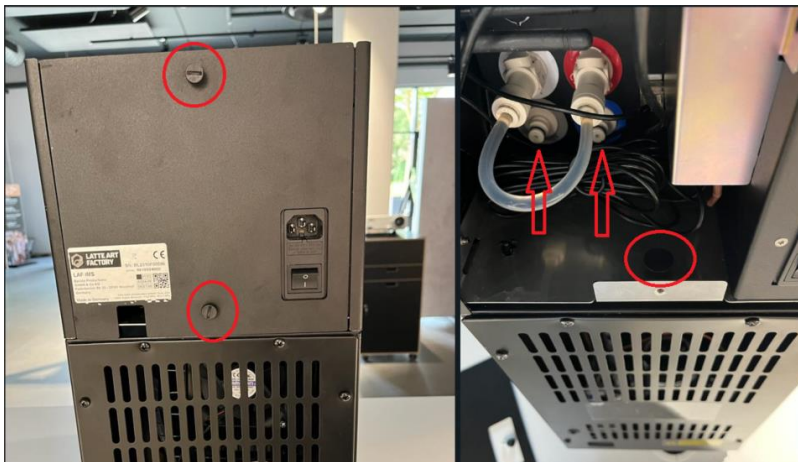

### Step2

- now remove the unit from the refrigerator for easier repair.
- Remove the side panel there are 4 Torx screws on each side panel.
- and remove the earthing cable on both side walls which is inside.

- Remove the side panel there are 4 Torx screws on each side panel.
- and remove the earthing cable on both side walls which is inside.

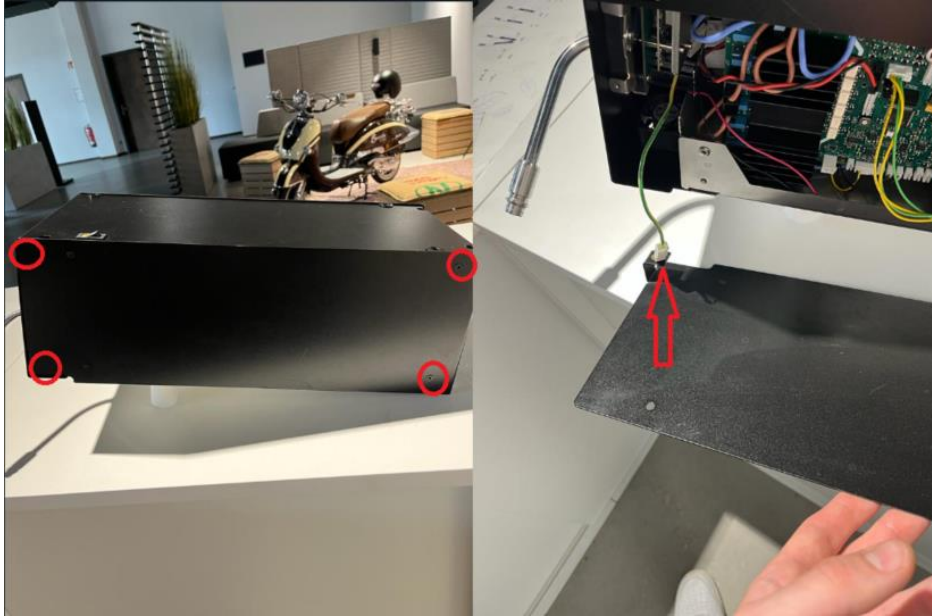


### Step3

- remove the red black that comes from the fan.
- and the earth cable which is on the upper part.




#### Step4

- turn the unit to the other side.
- there is a hose that leads to the outlet loosen it.

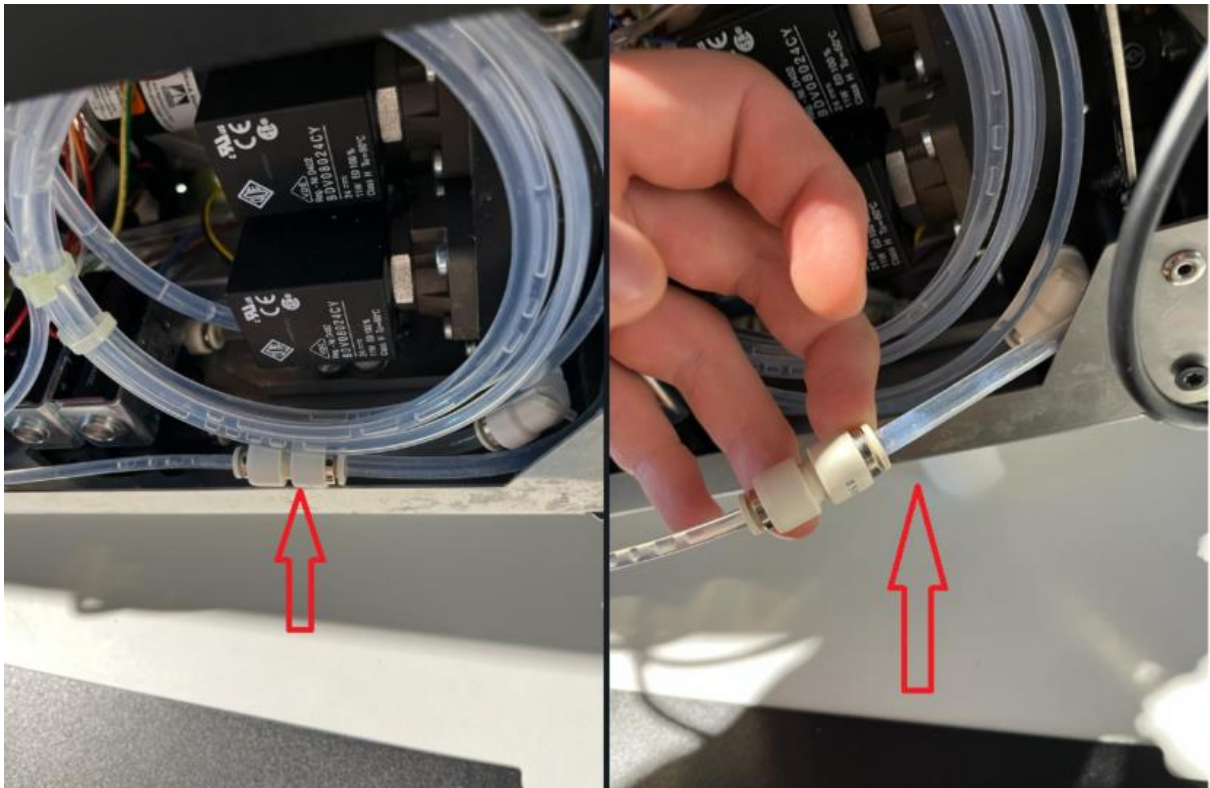


#### Step5

- inside the display you will see 2 lan cables that need to be disconnected using a flat screwdriver.

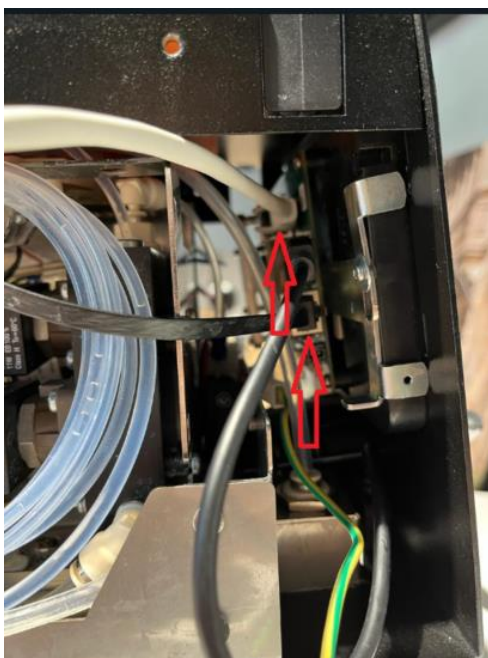

### Step6

- lay the unit on its side.
- Loosen the two 20 Torx screws.

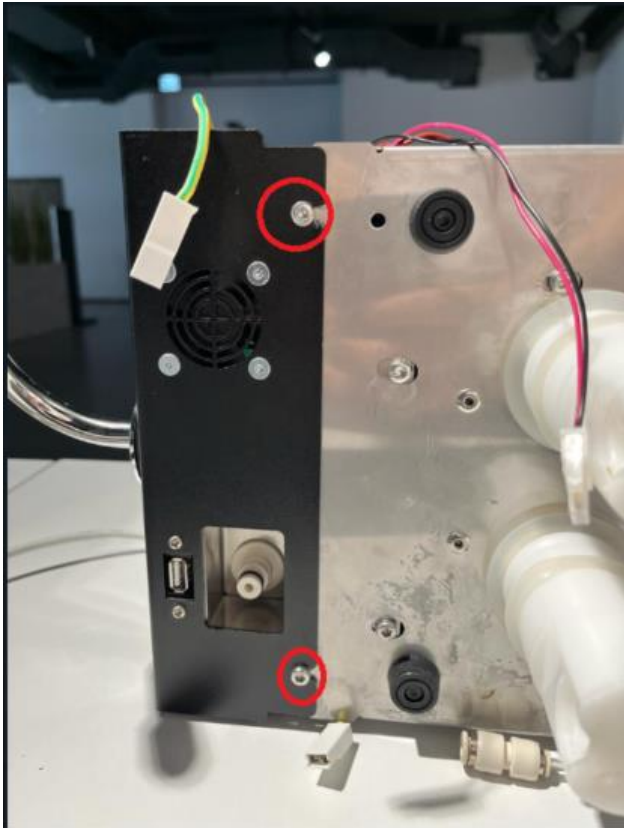

### Step7

- now you can separate the upper housing.
- it is best to pull them up from the back.
- Be careful, the hose from the outlet may be stuck.

