

LAF Classic Removal Heater

Time Needed: 30Min.


Parts Needed: 8615501301 FTH 2300W/230V Double Fuse



Tools Needed: Screwdriver Torx 10&20, Pliers


Step1

- Remove the hose that goes to the cleaning valve.
- 7 cables that are on the heater.

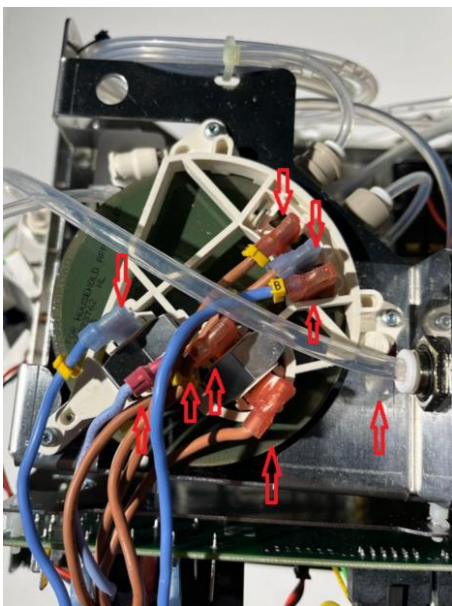

Step2

- remove the three 10mm torx screws.
- remove the 2 hoses from the inlet and outlet of the heater.

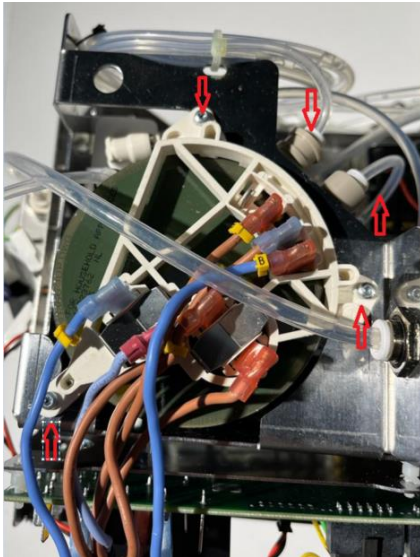

Step3

- remove the heater from the guide.
- Under the heater there is a grounding cable and a sensor
- Remove the sensor.
- The grounding cable is fastened with a 20 Torx screw.

