

## LAF Configtool

to use the Configtool make sure that your device has Windows 10 and Java 8


Step1

open run.

database	✓	15.02.2023 09:16	Dateiordner
images	✓	22.02.2023 12:51	Dateiordner
mkConfigBatch	✓	22.02.2023 12:51	Dateiordner
CCLogo	✓	22.02.2023 12:51	PNG-Datei
ConfigTool	✓	22.02.2023 12:51	Executable Jar File
LanguageCollection	✓	25.05.2023 14:19	Data Base File
run	✓	22.02.2023 12:51	Windows-Batchdatei


Step2

then a pop up should appear click on LAF no matter which LAF you use.

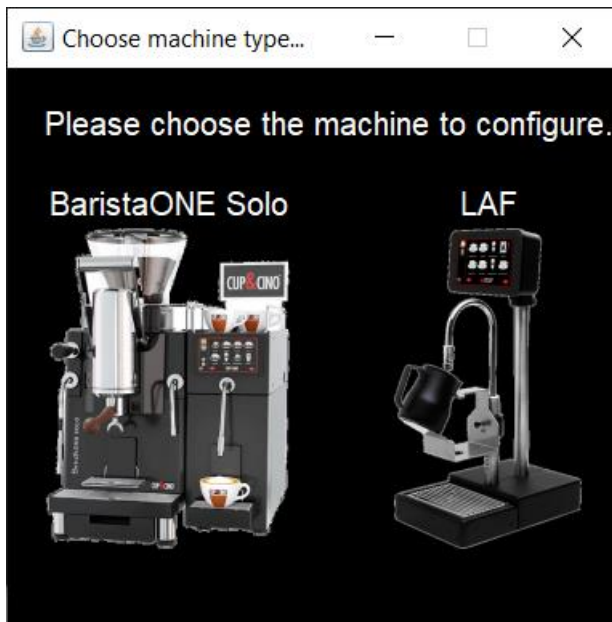


### Step3

now you see the same interface as on the machine now you can create your own configuration.

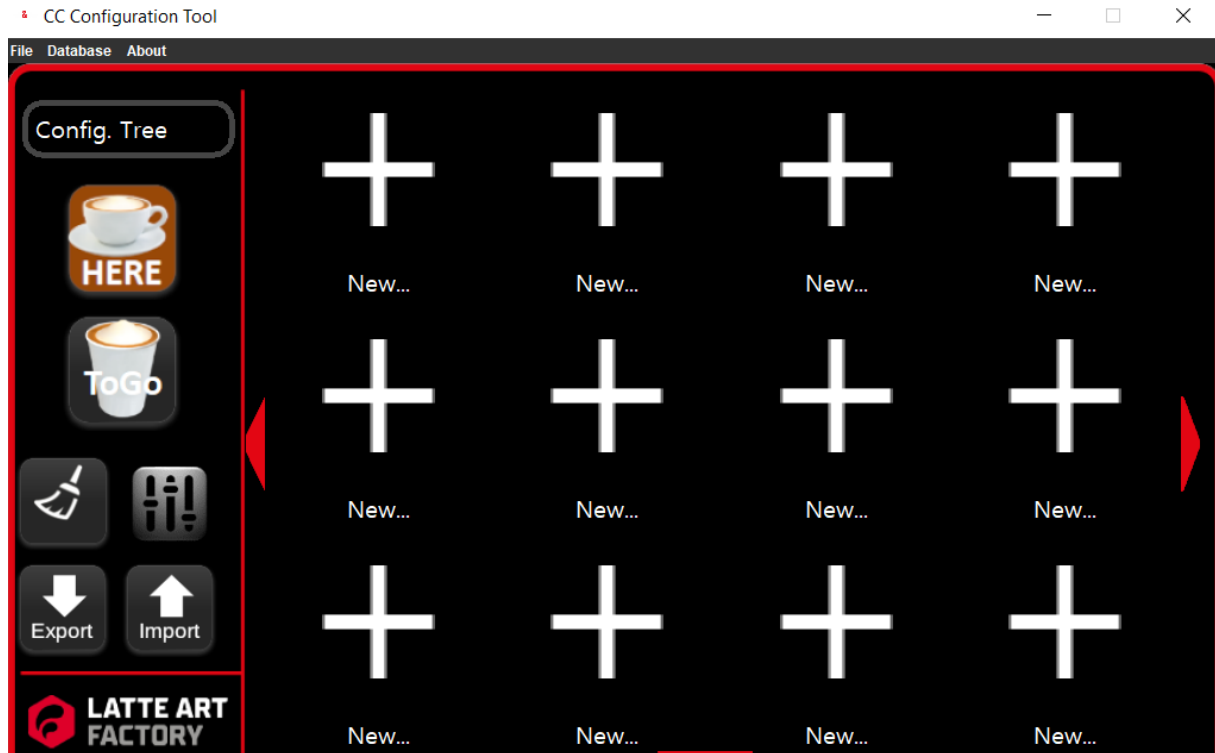


### Step4

- go to the menu.
- now click on languages settings to choose the languages you need.
- for example, A is German, and B would be Danish (English is the main language)
- now go back and go to language selection.
- and click on language A the middle.

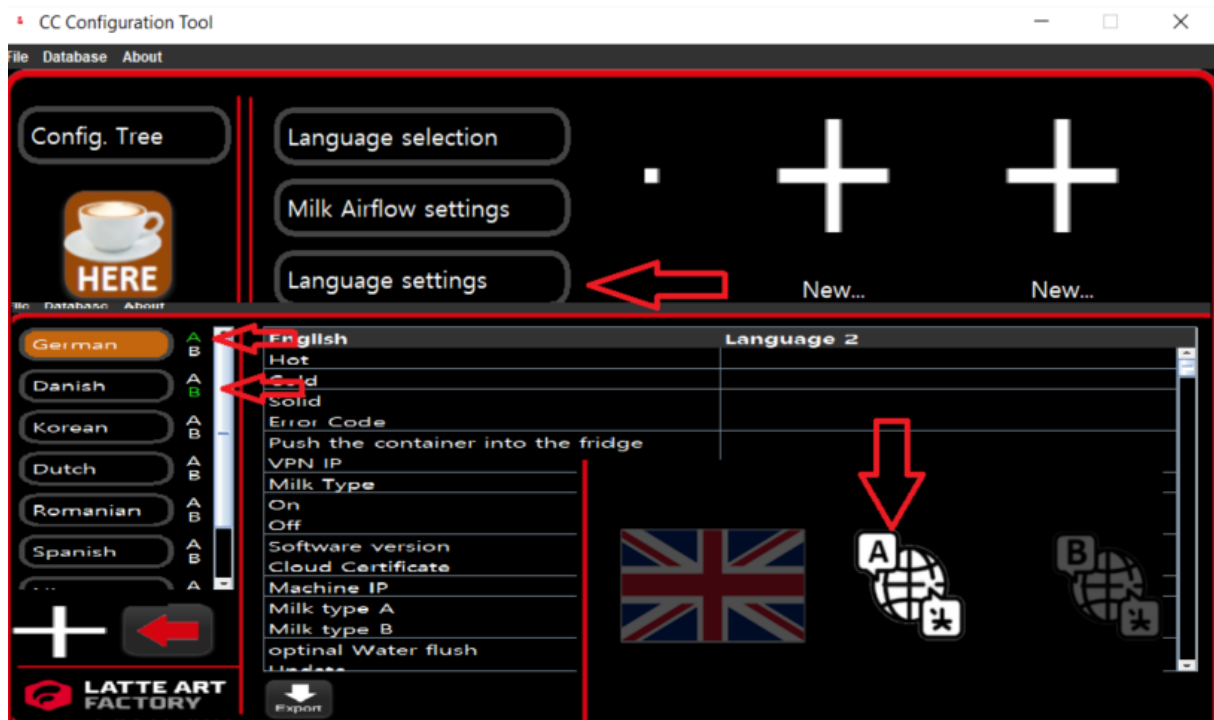


## Step5

- now they go to Milk Airflow settings.
- there you can individually set your phases which temperature, air, names you need but you can also set later the machine.

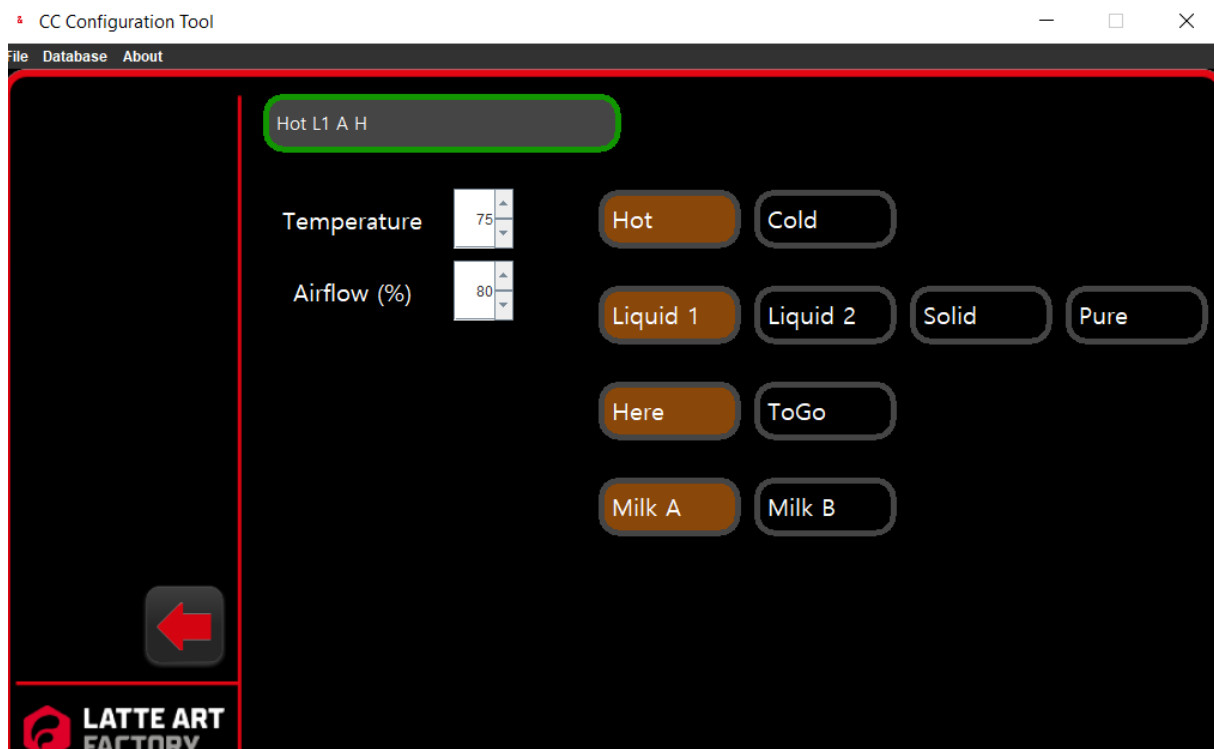


## Step6

- now you can start adding your product groups.
- press new on the plus symbol.
- and then again on the plus symbol.
- Press Choose a name...

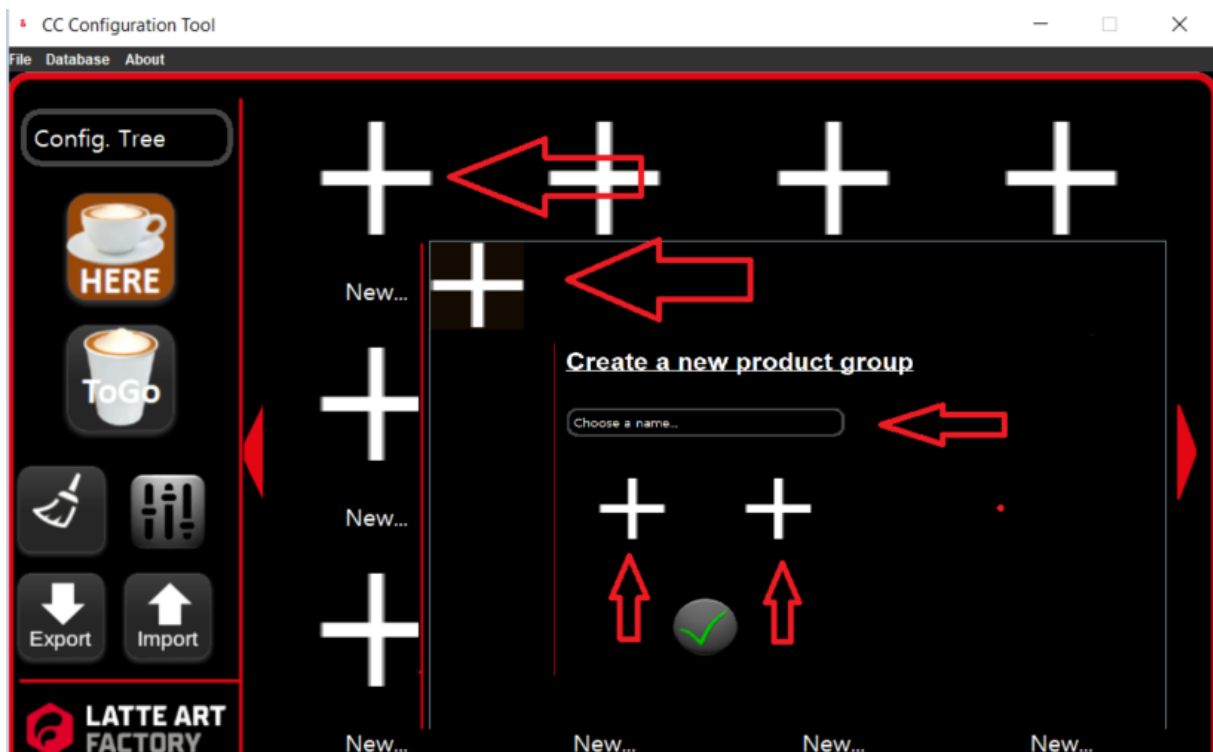

## Step7

- name your product group in which case it would be Cappuccino.
- you can name the product group in 3 different languages or all the same.

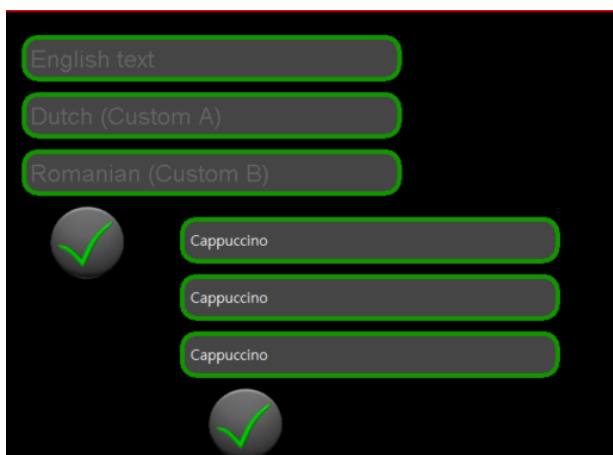

## Step8

- add a picture for your product group.
- the plus symbol on the left is for the here product and on the right for the Togo product.
- when you have added the name and the pictures press the green check mark.




## Step9

- now should be a product group to see.
- Click on the product and you should be taken to a blank page.
- now you can add up to 9 products.
- press the plus symbol.




## Step11

- now you can also add the phases for your product.
- add all 3 phases even if you don't use them all, otherwise you won't be able to add a phase later the machine.
- if you have added a phase, you can also change the dispense time or later on the machine itself.

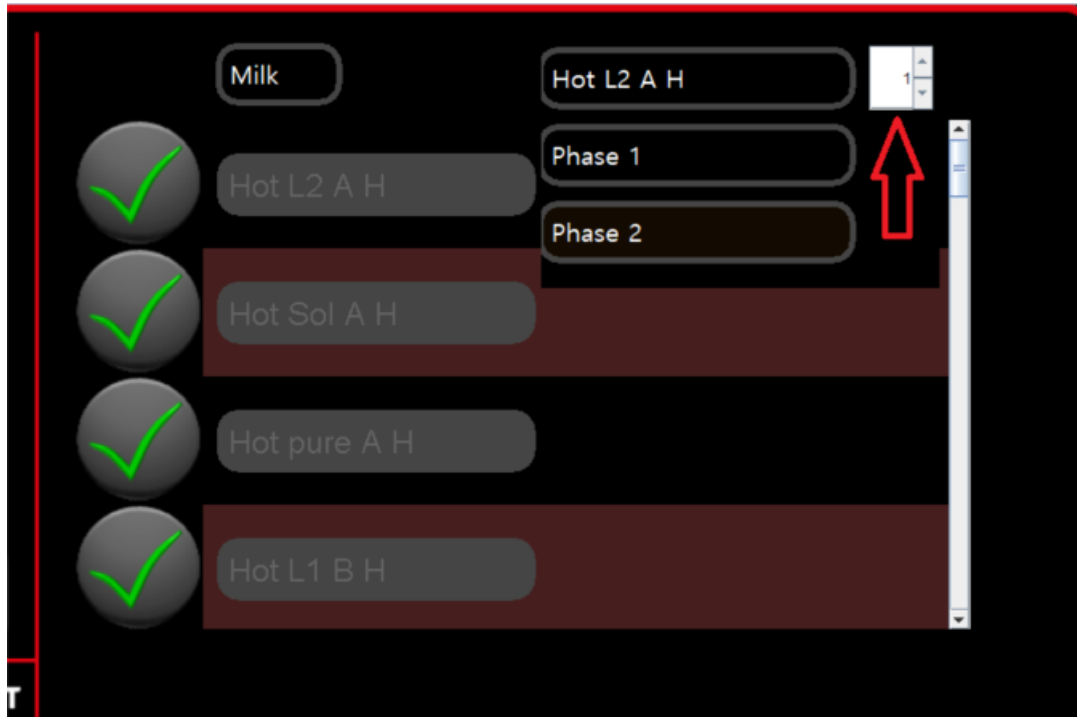

## Step12

- now you should have a product.
- the same should also be done now for the Togo product.
- Repeat the same process as described in step 11.
- only click on Togo this time
- but the Togo product will not appear it is invisible at that time.

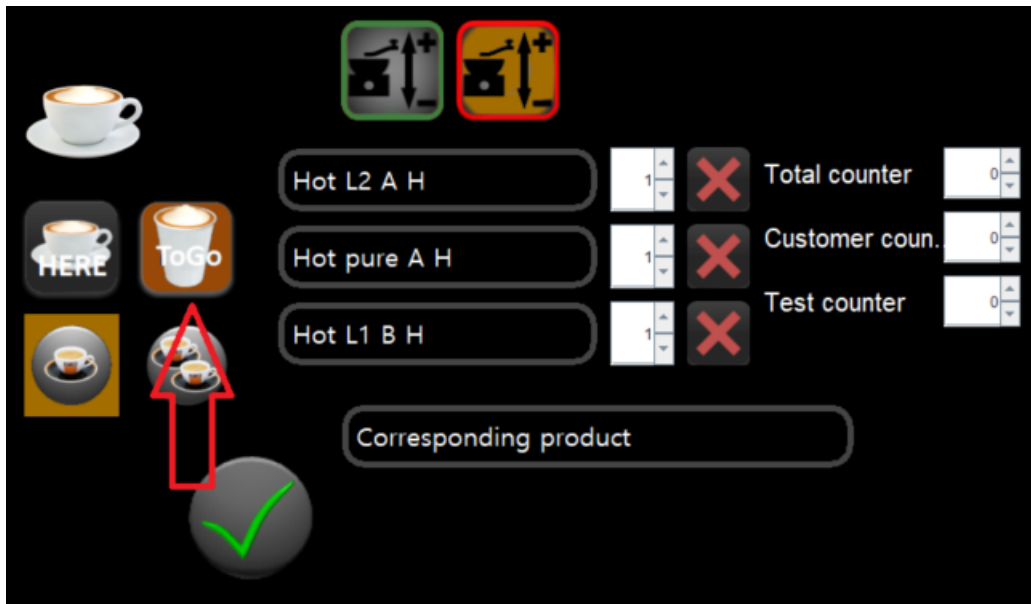

### Step13

- If you have created the Togo, Corresponding product is also possible.
- there you should find your Togo product click on the green check to add it.
- then the respective name should be there in the corresponding product.

### Step14


- You can also modify or delete products and product groups by right-clicking on them.
- and if you want to delete all of them, just click on the broom.
- of course, the products are not completely gone, but only from the interface. you can add the created products again by pressing the plus symbol.





## Step15

- If your configuration is ready, you can now download it to the USB stick.
- click on the Export symbol.
- Now you can transfer the configuration to the USB port.

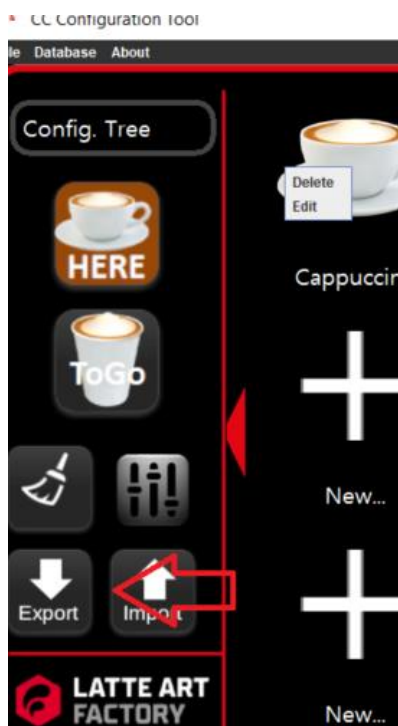

## Step16

- If you want to change your configuration in the future, you could create a Save.file
- To do this, press File in the top left-hand corner.
- There you will see the name Save.
- click on it and save file.

